


Installation

The **SpringLOCK** system consists of a **Bridge** and a **Lock**. It is typically installed on the back of a frame either in pairs (**Side-by-Side** method) or, at the bottom of a frame, with **Hang Plates** at the top (**Hang Plate** method). They lock on to screws in the wall. The picture can only be released using the special tool.


First, screw the **SpringLOCK** hardware to the back of the frame, as the drawings. Part insert **Lock** into **Bridges**. Measure distance 'X mm' between hardware to give spacing for screws in wall.

Method A - 'Side-by-Side'

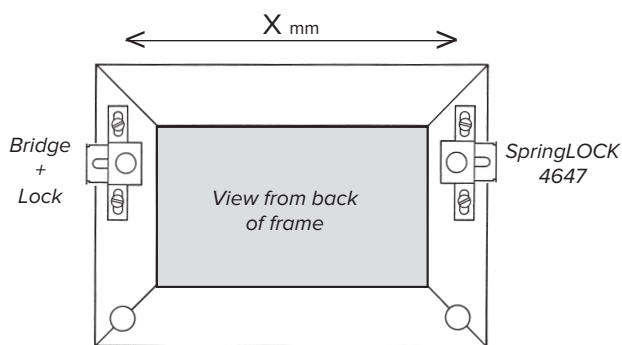


Mark position of the two screws on wall, 'X mm' distance apart. Use masking tape to avoid marking wall. Always use a spirit level. Bridges have slots for fine adjustment.

Drill and fit screws into wall. Use No.6, No.8 or No.10, as available, and wall plug or dry wall anchor as required. Leave screw heads proud by 1/4" / 5mm app.

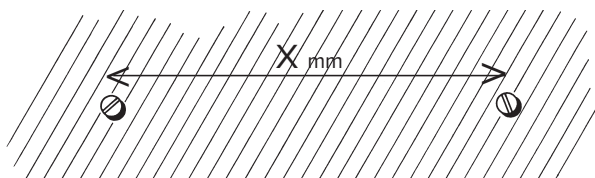


Insert two screws in wall for **Side-by-Side** method.

Offer frame up to wall, fitting **Bridges** over screws in wall and push in **Locks** with fingers.

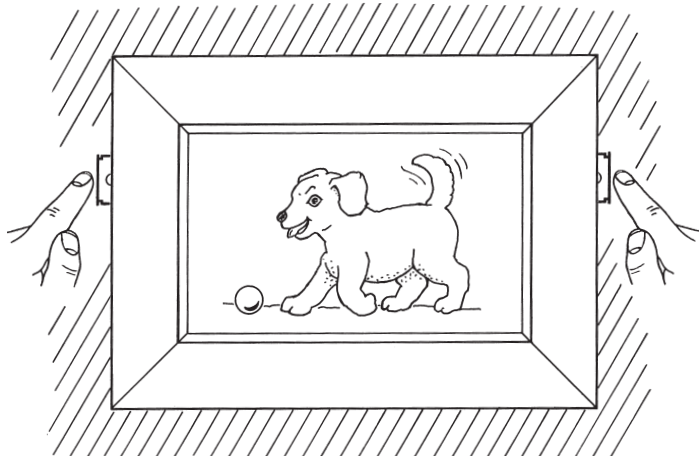

Push in **Locks** to secure over screws in wall.
Locks can only be removed with special **Release Tool**, 7165 or 2957.

Method B - 'Hang Plate'

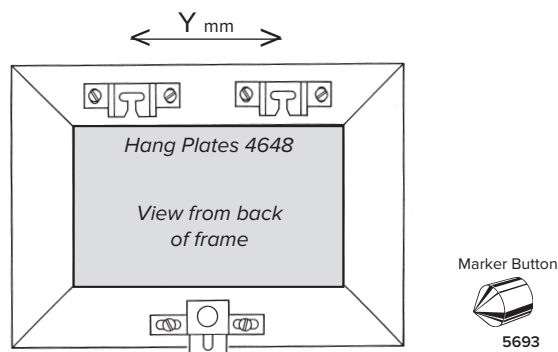



Screw two **Hang Plates** and **Bridge** to frame as shown. Measure distance apart, 'Y mm'.

Fit two No.6, No.8 or No.10 screws in wall 'Y mm' distance apart.

Put **Marker Button** in the **Bridge**. Hang frame on wall, engaging **Hang Plates** on to screws. Press on bottom to mark position of third screw.

Lift off frame and remove **Marker Button**. Insert third screw in wall. Or, use **Release Tool** with **Marker**, 7165. Replace frame on wall and push in **Lock** to secure.

Insert three screws in wall for **Hang Plate** method.
Mark position for third screw with **Marker Button**.

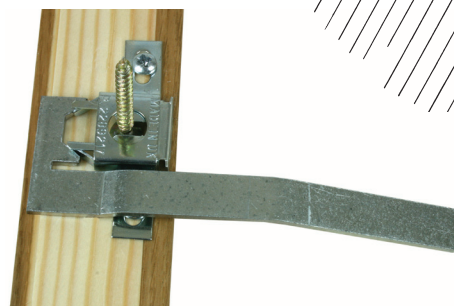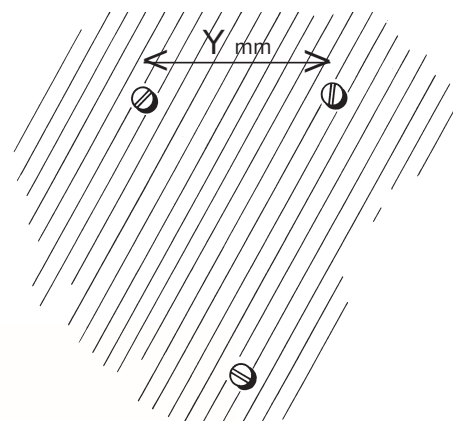

Release Tool - the **Locks** in **SpringLOCK** are pushed in with finger pressure. To release them use a special tool, 2957 or 7165.

Using the Springlock Release Tool with Marker

1

Offer the Marker, 7165, point up, to the SpringLock hole of the bracket. The lock insert should be partially withdrawn.



2

Place the Marker into the hole of the SpringLock bracket.



3

With the Marker Tool in position in the SpringLock, position frame on wall. Gently tap against the frame at the marker position to indicate the exact screw location on the wall.

